



## Horizontal Blinds – Inside Mount Fauxwood

### HOW TO INSTALL

Tools Needed for Install (not included in the window blind package):

Pencil  
Measuring Tape  
Screwdriver  
Drill  
Level


OPTIONAL, Used if not installing valance flush with drywall:

Valance Returns – 2

Valance Clips for Securing Valance Returns to Valance – 2

**Valance Return**


**Valance Clip**

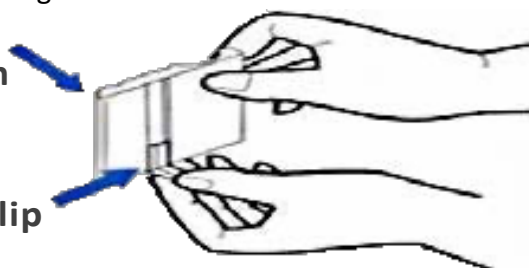


REQUIRED if Width of Window Blind over 38" (brackets will be included in the box):

Center Support Brackets – 1 for Blind Width of 38" to 48"

Center Support Brackets – 2 for Blind Width over 48"

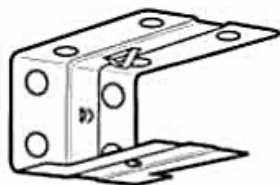

Products in the Window Blind Package for Install:

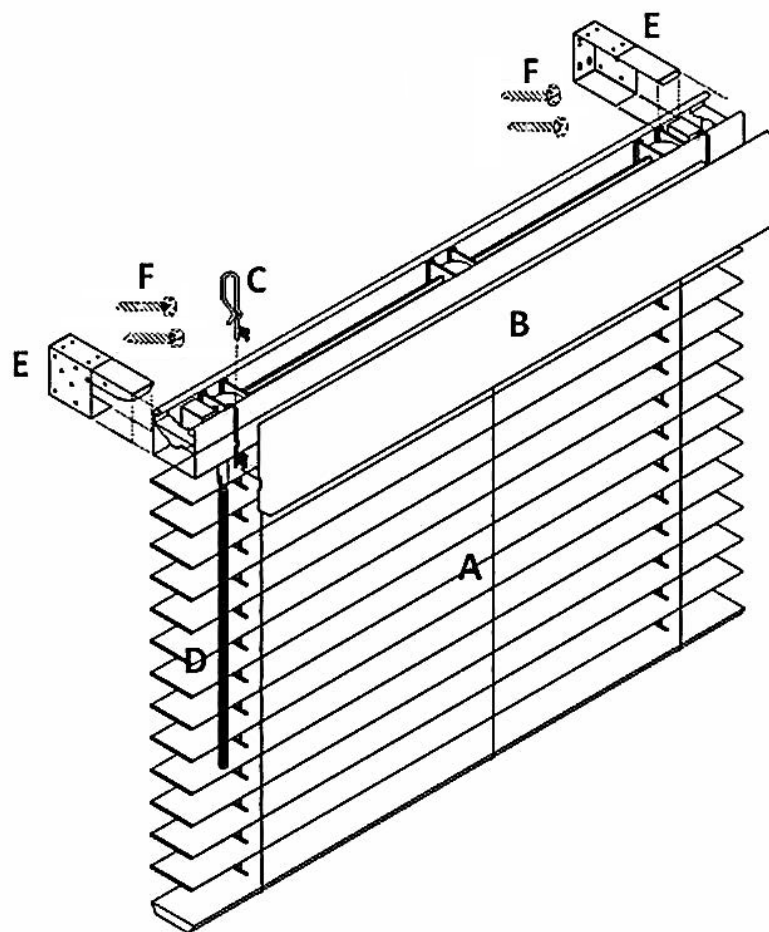

A – Blind x 1

B – Valance x 1

C – Valance Clips to Secure Valance to Headrail

\*(Quantity Based on Width, Up to 48" – 2, 48"-72" – 3, 73"-96" – 4, Over 96" – 5)

D – Tilt Wand x 1

E – Mounting Brackets x 2

F – Screws 1-1/4" #8 Hex Head x 4 (if center bracket, 2 more per bracket)

\*Use alternative fasteners for drywall, aluminum or concrete installs, not included with blinds

## 1 Mark bracket location

### Items Needed:

Pencil

Mounting brackets

Center brackets (if included in the window blind package, see 1<sup>st</sup> page)

Hold one bracket on the left hand of your window opening (See Figure A). You can screw in the bracket from the side or the top of the bracket. Mark the holes to drill with your pencil. Repeat on the other side.

If your blind requires a center bracket, measure your window opening and hold your center bracket so it is evenly spaced between each side and aligned with the depth of the bracket locations. Mark the holes to drill using the top, rear center hole. If your blind requires more than one center bracket, space them evenly between one another and the sides of the opening.

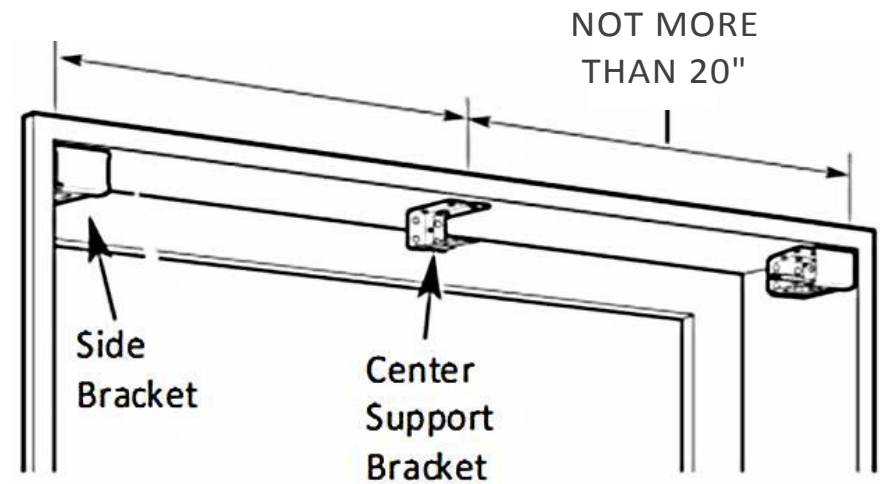


Figure A

## 2 Drill holes

### Items Needed:

Drill

Drill bit

Using the holes you marked in Step 1, drill each hole.

## 3 Screw in brackets

### Items Needed:

Mounting brackets

Center brackets (if required, see 1<sup>st</sup> page)

Screws

Screw each bracket into the holes you drilled in Step 2.

## 4 Attach valance clips

### Items Needed:

Horizontal Blind

Valance Clips to Secure Valance to Headrail

Secure the clips to the headrail spaced evenly apart. (See Figure B)  
Make sure the clips don't interfere with anything in the headrail.

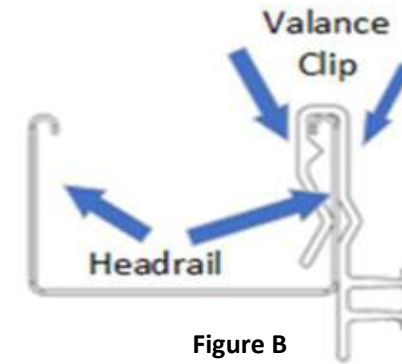


Figure B

## 5 Mount blind in brackets



### Items Needed:

Horizontal Blind

Ensure the front cover of each bracket is open.

Push the blind headrail into each bracket and the center bracket if you are using one.

Push the front cover down on each bracket until it snaps in place.

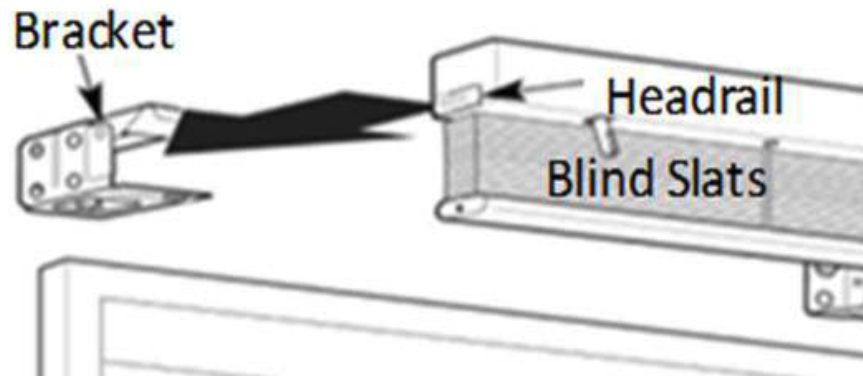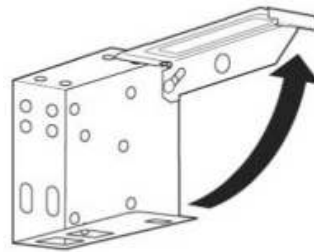

## 6 OPTIONAL – Prepare the valance assembly with the optional returns. (If not using returns, skip to next step)

### Items Needed:

Valance

\*Valance Returns – 2 (Used if not installing valance flush with drywall)

Valance Clips for Securing Valance Returns to Valance – 2

Slide the valance clip into the return and once attached, push the other end of the clip into the valance. Repeat on the other side. (See Figure C)

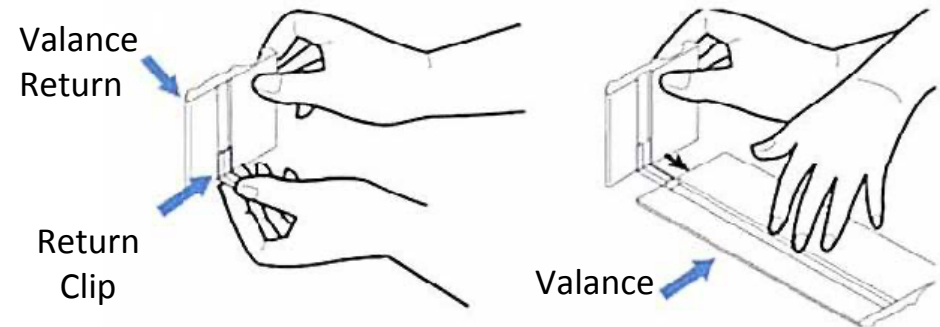


Figure C

## 7 Install the valance

### Items Needed:

Valance or Valance Assembly with Returns

Align the valance channel with the bottom of the valance clips you installed on the headrail. (See Figure A)

Tip the valance toward you, so the bottom part of the clip attaches to the bottom of the channel (See Figure A) and then tip the valance up so the top part snaps in to the top of the channel. (See Figure B)

Adjust the valance and returns, if using, to ensure they are aligned.

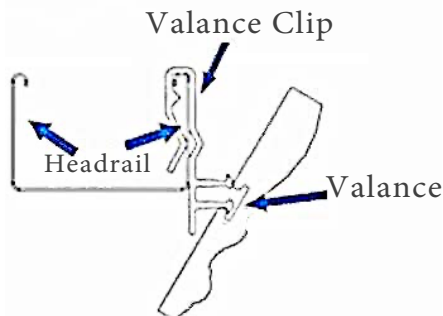


FIGURE A


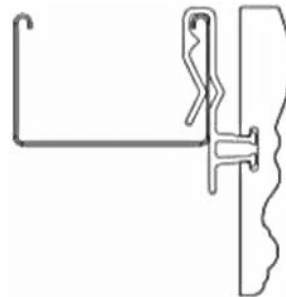


FIGURE B

## 9 OPTIONAL Install hold down brackets

Screw the hold down brackets to each side of the bottom of the window opening.

Affix the bottom rail to the hold down brackets and ensure it's secure.

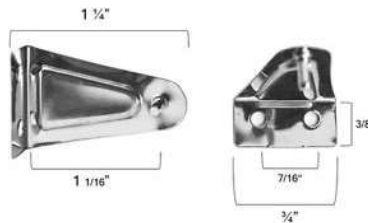


## 8 Attach the tilt wand

### Items Needed:

Wand

Align the hole in the tilt wand with the tilting mechanism protruding from the headrail.

Tip the wand up to insert it onto the mechanism and tilt it down to slide it on securely.

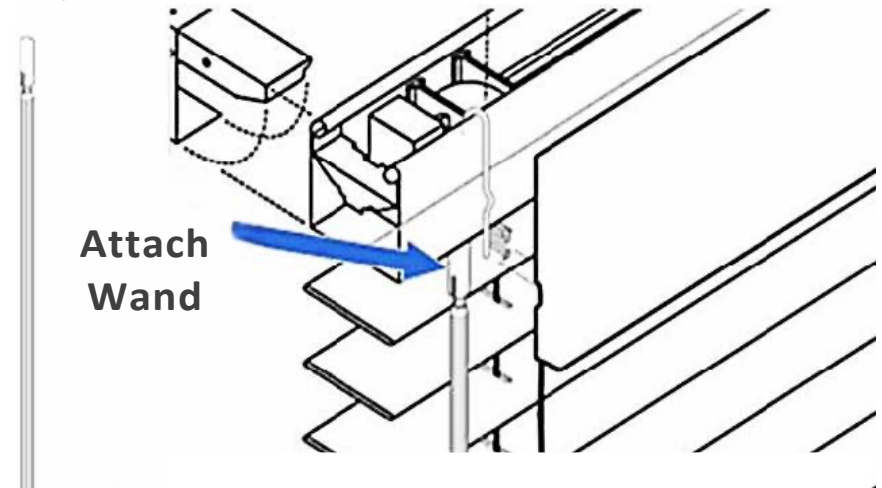

## 10 Confirm window blind operation

Raise the blind all the way up and lower the blind all the way down

Raise the blind to a center position to ensure it locks in place and lower the blind all the way down

Tilt the slats all the way open, all the way up and tilt the slats all the way closed